



#### **Package Contents**

- . Wireless-G Broadband Router with 2 Phone Ports
- Power Adapter
- . Setup Wizard CD-ROM with User Guide
- Network Cable
- Quick Installation
- Registration Information Card

## Wireless-G

**Broadband Router with 2 Phone Ports** 

**Quick Installation** 



## Connect the Router

There are two wavs to configure the Router:

- Run the Setup CD-ROM It is strongly recommended that you use the Setup CD-ROM. Insert the Setup CD-ROM into the CD-ROM drive, and follow the on-screen instructions.
- Use this Quick Installation guide If you wish, you can use the Router's Web-based Utility, Proceed to Step 1 of this Quick Installation.
- Make sure that all of your hardware is powered off, including the Router, PCs, broadband modem.
- Attach the antenna to the Router's antenna port.
- Connect your broadband modem's Ethernet cable to the Router's Internet port.
- Connect one end of an Ethernet network cable to one of the numbered ports on the back of the Router, Connect the other end to an Ethernet port on a network device, e.g., a PC, print server, or switch.
  - Repeat this step to connect more PCs or other network devices to the Router.







fax machine to the

Power on the broadband modem.

Connect the included power adapter to the Router's Power port, and then plug the power adapter into an electrical outlet.

> The Power LFD on the front panel will light up as soon as the power adapter is connected properly.

- Power on the PC vou wish to use to configure the Router.
- If necessary, disconnect the RJ-11 telephone cable of vour telephone from the telephone wall jack. Then connect that end to the Router's **PHONE 1** port.

If you have a second phone line, repeat step H to connect a telephone or Router's **PHONE 2** port.



NOTE: Make sure your telephone is set to its tone setting (not pulse).



**IMPORTANT:** Do not connect the Phone port to a telephone wall jack, Make sure you only connect a telephone or fax machine to the Phone port. Otherwise, the Router or the telephone wiring in your home or office may be damaged.

# Configure the Router

In Step 2, you will need the setup instructions provided by vour Internet Service Provider (ISP). If you do not have this information, then contact your ISP before proceeding.

The instructions from your ISP tell you how to set up your PC for Internet access. Because you are now using the Router to share Internet access among several computers, you will use the setup information to configure the Router instead of vour PC.

Open your PC's web browser. Enter http:// 192.168.15.1 (the Router's default local IP address) in the web browser's Address field. Then press the **Enter** kev.

A screen will appear and ask vou for a User Name and Password, Enter admin (the default) in the User Name and Password fields. (Later you should set a new password using the Administration tab's Management screen. This will help secure access to the Web-based Utility.)

Then click the **OK** button.

NOTE: Make sure your PC's Ethernet adapter is set to Obtain an IP address automatically. For more information. refer to Windows Help.

Address http://192.168.15.1/



VolP

- The Router's Web-based
  Utility will appear with the
  Basic Setup screen showing.
- For the Internet Connection Type setting, three Internet connection types are offered through the drop-down menu.

  Depending on which connection type you select, the features available on the Basic Setup screen will differ. Proceed to the instructions for the connection type you are using.

## 1 Obtain an IP Automatically (DHCP)

- a If your ISP says that you are connecting through DHCP or a dynamic IP address from your ISP, then select **Obtain an IP automatically** as the Internet Connection Type.
- b Click the **Save Settings** button.

### 2 Static IP

a If your ISP says that you are connecting through

a static or fixed IP address from your ISP, then select **Static IP** as the Internet Connection Type.

- Enter the IP Address, Subnet Mask, and Gateway Address provided by your ISP.
- In the *DNS 1-3* fields, enter the DNS address(es) provided by your ISP. You need to enter at least one DNS address.
- d Click the **Save Settings** button.

#### 3 PPPoE

Wireless Security Access Applications Administration States Vol

Otton at P automatically w

Clark DNCP Server	Clark	Decide	Decide
DNCP Printy	Grade	Decide	Decide
DNCP Address	Clark Address		
DNCP Address			


0 0 0 0

Obtain an IP

Automatically

Optional Settings are gasted by some SP41

- If your ISP says that you are connecting through PPPoE or if you normally enter a user name and password to access the Internet, then select **PPPoE** as the Internet Connection Type.
- Enter the User Name and Password provided by your ISP. (Also enter the Service Name, if required.)

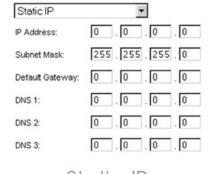

Static IP

PPPoE

User Name:

Password:

• Keep Alive: Redial Period

45 Sec.

PPPOE

- c Click the **Save Settings** button.
- Click the **Status** tab and then the **Router** tab. Click the **Connect** button to start the connection
- Power your cable or DSL modem off and back on again.
- Restart or power on your PCs so they can obtain the Router's new settings.

To test the Router's settings, open your web browser from any computer. In the browser's Address field, enter www.linksys.com/registration and press the Enter key.

Congratulations! The installation of the Router is complete.

Address Attp://www.linksys.com/registration/

LINKSYS

A Division of Cisco Systems, Inc.

For additional information or troubleshooting help, refer to the User Guide on the Setup CD-ROM. You can also visit our website for further support.

Vebsite

http://www.linksys.com/support

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2006 Cisco Systems, Inc. All rights reserved.

WRTP54G-0I-60312NC BW