



**Package Contents**

- Phone Adapter with 2 Ports for Voice-over-IP
- Power Adapter
- Installation and Troubleshooting Guide on CD-ROM
- Network Cable
- Quick Installation
- Registration Card

# Phone Adapter

with 2 Ports for Voice-over-IP

Quick Installation

If you already have an account set up with InPhonex, then proceed to Step 1.

If you do not have an account set up with InPhonex, then go to [www.inphonex.com](http://www.inphonex.com) and sign up for service. After you have set up an account, proceed to Step 1.

## 1 Connect the Phone Adapter

Step 1 explains how to connect the Phone Adapter to your network and telephones or fax machines. Shown below is a connection diagram displaying a typical setup with one InPhonex Internet phone line.



**A** Using a telephone cable, connect your telephone to the PHONE 1 part of the Phone Adapter.

**B** If you have a second InPhonex line on your account, then connect another telephone or a fax machine to the PHONE 2 part of the Phone Adapter.



**C** Connect the included Ethernet network cable to the ETHERNET port of the Phone Adapter.

Connect the other end to one of your router's Ethernet ports.

**D** Connect the included power adapter to the POWER port of the Phone Adapter.

Connect the other end to an electrical outlet.

**E** The Power, Ethernet, and Phone LEDs will be solidly lit when the Phone Adapter is ready for use.

**The installation of the Phone Adapter is complete. You may pick up the phone and make calls.**



**NOTE:** For information about your InPhonex Internet phone service, refer to the InPhonex service materials or visit [www.inphonex.com](http://www.inphonex.com).

**INPHONEX**

**Customer Care**

US/Canada Toll Free: 866-349-7338

Direct: 305-728-4647

SIP: 7284647@sip.inphonex.com

email: [support@inphonex.com](mailto:support@inphonex.com)

**Website**

<http://www.inphonex.com>

**LINKSYS**

**Website**

<http://www.linksys.com> or

<http://support.linksys.com>

**FTP Site**

<ftp://ftp.linksys.com>

**Sales Information**

800-546-5797 (800-LINKSYS)